

# ASF 950 Fan



## Operating Instructions & Safety Guide



0800 211 611  
andrews-sykes.com

### General Safety

- Electric Ventilation Fans are for internal use only.
- This equipment should only be used by a competent person who has read and understood these instructions.
- Check condition of equipment before use. If unit is showing any signs of damage contact your supplier immediately.
- Never operate this equipment if you are ill, feeling tired or under the influence of alcohol or drugs.
- Do not use in wet or damp conditions.
- Keep all vents and grilles clear of obstructions.
- Keep children and animals away from electric appliances.
- Never leave them alone in room where the units in use.
- Make sure equipment is switched off and unplugged after use.

### Electrical Safety

- 230 volt units require a standard domestic 13 amp socket.
  - 110 volt units require a 32 amp BS 4343 power supply
  - Always inspect plugs and power cables for damage before plugging into power supply.
- DO NOT USE IF ANY DAMAGE IS FOUND.
- Ensure cables are installed so as not to cause a hazard.
  - If an extension lead is used, ensure it is of the correct standard and fully uncoiled before use.
  - Cables must not be laid in wet or damp areas.
  - Do not move equipment while operating.
  - Do not pull equipment by the power lead.
  - It is recommended that the electrical supply to this equipment is protected by an RCD.

### Getting started and operation

Position equipment on level ground

**Fig 1**

Apply the brakes to the castor wheels



1. Connect to electrical supply

**Fig 2**

2. Switch on power and set rocker switch to position 1



**Fig 3**

3. Select required fan speed (Variable speed versions only)  
4. Switch off power and unplug unit when finished with.

CAUTION Ear defenders should be worn when fan is running at full speed. Max 85dba @ 1mt.