

# CT 40 Electric Fan Heater



## Operating Instructions & Safety Guide



0800 211 611  
andrews-sykes.com

### General Safety

- Electric heaters are for internal use only.
- This equipment should only be used by a competent person who has read and understood these instructions.
- Check condition of equipment before use. If unit is showing any signs of damage contact your supplier immediately.
- Never operate this equipment if you are ill, feeling tired or under the influence of alcohol or drugs.
- Do not use in wet or damp conditions.
- Keep all vents and grills clear of obstructions.
- Keep children and animals away from electric heaters. Never leave them alone in room where the units in use.
- Make sure equipment is switched off and unplugged after use.

### Electrical Safety

- This unit requires a 16 amp 415 volt 3ph + E electrical supply.
- Always inspect plugs and power cables for damage before plugging into power supply.
- DO NOT USE IF ANY DAMAGE IS FOUND.
- Ensure cables are installed to prevent hazards.
- If an extension lead is used, ensure it is of the correct standard and fully uncoiled before use.
- Cables must not be laid in wet or damp areas.
- Do not move equipment while operating.
- Do not pull equipment by the power lead.
- It is recommended that the electrical supply to this equipment is protected by an RCD.

### Getting started and operation

Position equipment on level ground;


Connect to electrical supply.

**Fig 1**  
Switch on power (Fan Only)

**Fig 2 & 3**  
Switch on Heat

**Fig 4**  
Set thermostat to required heat setting

Switch off power and unplug unit when finished with.

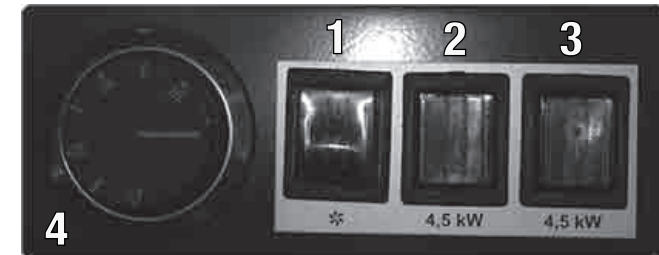

Up to a maximum of 3mts of 100mm ducting may be fitted to heater outlet if required.