

Catalytic Cabinet Heater



Operating Instructions & Safety Guide

ANDREWS
HEAT FOR HIRE

0800 211 611
andrews-sykes.com

LPG Butane Safety

- Always use a suitable pressure regulating device, when connecting cylinders to the appliance.
- Cylinders **MUST** be used, stored and transported in a vertical position, with the valve uppermost.
- **DO NOT** Allow cylinders to come into contact with electrical circuits or apparatus.
- **ALWAYS** keep cylinder outlet valve clean and free from contaminates.
- **ALWAYS** close the cylinder valve whenever gas is not required, even if the cylinder is still connected to the appliance.
- LPG Butane gas is highly flammable, if there is a smell of gas turn off heater, remove cylinder and move to outside in a well-ventilated area and contact supplier immediately.

Getting started and operation

Catalytic heaters are intended for internal use only. Position heater away from any flammable materials. Open rear cover, position cylinder in heater. Remove valve dust cap and press clip on regulator to cylinder valve. Turn lever to vertical position to open valve.



To ignite, press and hold down rotary knob and turn 90o anti-clock wise, when pilot light ignites, continue to hold down knob for approximately 30 seconds. Release knob and set to desired heat setting.



To turn off heater, turn regulator valve lever to horizontal position, depress lever Fig 2 and disconnect regulator from cylinder.