

Ceramic Radiant Quartz electric heater



Operating Instructions & Safety Guide



0800 211 611
andrews-sykes.com

General Safety

- Electric heaters are for internal use only.
- This equipment should only be used by a competent person who has read and understood these instructions.
- Check condition of equipment before use. If unit is showing any signs of damage contact your supplier immediately.
- Never operate this equipment if you are ill, feeling tired or under the influence of alcohol or drugs.
- Keep all vents and grills clear of obstructions.
- Keep children and animals away from electric powered equipment. Never leave them alone when the unit is in use.
- Make sure equipment is switched off and unplugged after use.

Electrical Safety

- This unit is dual voltage and can be used via a standard domestic 13 amp 230 volt socket or 110volt power supply.
- Always inspect plugs and power cables for damage before plugging into power supply.
- DO NOT USE IF ANY DAMAGE IS FOUND.
- Ensure cables are installed to prevent hazards.
- If an extension lead is used, ensure it is of the correct standard and fully uncoiled before use.

Cables must not be laid in wet or damp areas.
- Do not move equipment while operating.
- Do not pull equipment by the power lead.
- It is recommended that the electrical supply to this equipment is protected by an RCD.

Getting started and operation

Figure 1
Position equipment on level ground



Fig 1

Fig 2
Connect to selected electrical supply and ensure cable is fully unwound from storage bracket



Fig 2

Fig 3
Connect to selected electrical supply and ensure cable is fully unwound from storage bracket



Fig 3