

Electric Convector heater



Operating Instructions & Safety Guide



0800 211 611
andrews-sykes.com

General Safety

- Before plugging in to the electrical supply, check that your supply is the same as shown on the data plate of the appliance.
- If at all possible, avoid using extension leads.
- Do not allow leads to come into contact with lying water.
- Do not use in wet conditions.

Electrical Safety

- Ensure the appliance is unplugged and has cooled down before cleaning
- Do not pull the mains lead to unplug or move the appliance
- Do not allow children or incapacitated persons to operate the appliance
- Do not cover or place objects on the appliance
- Do not modify the appliance
- Allow 60cm (2 feet) clearance from any combustible surfaces.
- Use only in the upright position.
- Fully extend the cable when in use, keep away from the hot surfaces.
- It is normal for oil filled radiators to make some noise whilst heating up.
- It is recommended that the electrical supply to this equipment is protected by an RCD.

Getting started and operation

Fig 1
Turn the thermostat control knob clockwise to the MAX position and push the switches to the on position



Fig 1

Fig 2
Turn the thermostat to 1 for low heat
Turn the thermostat to 6 for highest heat
Adjust switches to the on position for a heat setting as required



Fig 2

Fig 3
Switch off power and unplug unit when finished with



Fig 3