

Model 40 / 160 Direct Fired Oil Heater



Operating Instructions & Safety Guide

ANDREWS
HEAT FOR HIRE

0800 211 611
andrews-sykes.com

General Safety

- This equipment should only be used by a competent person who has read and understood these instructions.
- Check condition of equipment before use. If unit is showing any signs of damage contact your supplier immediately.
- Direct fired oil heaters have a naked flame, do not position heater in close proximity to any combustible materials.
- Never operate this equipment if you are ill, feeling tired or under the influence of alcohol or drugs.
- Do not use in wet or damp conditions.
- Keep all vents and grills clear of obstructions.
- Keep children and animals away from industrial heaters
- Never leave them alone in room where the units in use.
- Make sure equipment is switched off and unplugged after use

Electrical Safety

- This unit requires a 230 volt electrical supply and plugs into standard domestic 13 amp socket.
- Always inspect plugs and power cables for damage before plugging into power supply.
- DO NOT USE IF ANY DAMAGE IS FOUND.
- Ensure cables are installed to prevent hazards.
- If an extension lead is used, ensure it is of the correct standard and fully uncoiled before use.
- Cables must not be laid in wet or damp areas.
- Do not move equipment while operating.
- Do not pull equipment by the power lead.
- It is recommended that the electrical supply to this equipment is protected by an RCD.

Getting started and operation

Fig 1
Position equipment on level ground;
Fill with clean fuel (38 sec Gas Oil
or 28 sec Kerosene)

Fig 2
Connect to 230 volt electrical
supply

Fig 3
Turn on heater by moving rocker
switch to position 1



Fig 1



Fig 2



Fig 3

Switch off heater by moving
rocker switch to position 0.
Disconnect from electrical
supply when not in use.