

Red Radiant Quartz electric heater



Operating Instructions & Safety Guide



0800 211 611
andrews-sykes.com

General Safety

- Before plugging in to the electrical supply, check that your supply is the same as shown on the data plate of the appliance.
- If at all possible, avoid using extension leads.
- Do not allow leads to come into contact with lying water.
- Do not use in wet conditions.

Electrical Safety

- This unit is dual voltage and can be used via a standard domestic 13 amp 230 volt socket or 110volt power supply.
- Always inspect plugs and power cables for damage before plugging into power supply.
- DO NOT USE IF ANY DAMAGE IS FOUND.
- Ensure cables are installed to prevent hazards.
- If an extension lead is used, ensure it is of the correct standard and fully uncoiled before use.
- Cables must not be laid in wet or damp areas.
- Do not move equipment while operating.
- Do not pull equipment by the power lead.
- It is recommended that the electrical supply to this equipment is protected by an RCD.

Getting started and operation

Fig 1
Position equipment on level ground



Fig 1

Fig 2
Connect to selected electrical supply and ensure cable is fully unwound from storage bracket



Fig 2

Fig 3
Select heat output requirement by choosing one or both of the unit's independently controlled infrared emitters



Fig 3

Switch off power and unplug unit when finished with